




Panasonic Lumix DMC-FX01 Rear Casing Replacement

If the rear casing of your camera is cracked like ours, this guide will help you replace it.

Written By: Andrew

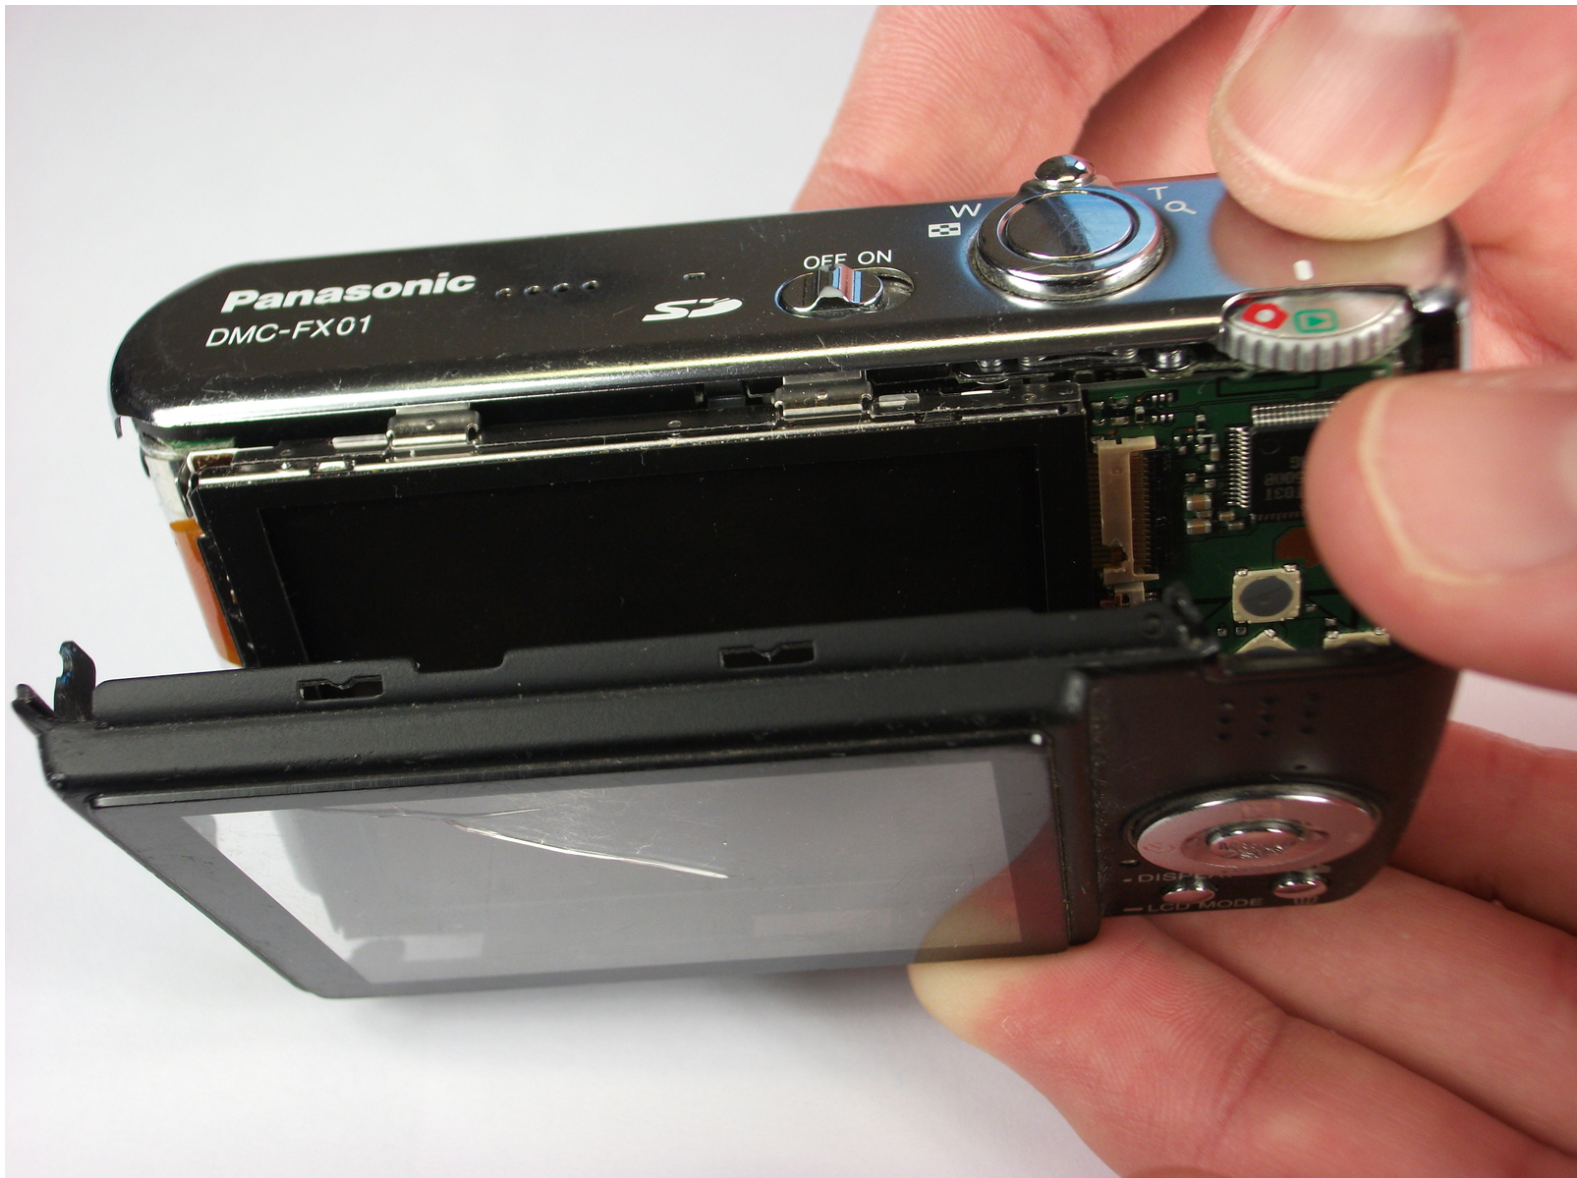

INTRODUCTION

Directions are given as if you were holding the camera to take a picture.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Locate the memory card and battery card latch on the bottom of the camera.
- Slide the latch to the open position.

Step 2



- Open the battery latch, and slide the battery release lever to the right.

Step 3



- Remove the battery from the camera.

Step 4 — Rear Casing



- Using a size #00 Phillips screwdriver, remove the three 4.58 mm screws on the bottom of the camera.
- Use this screwdriver for all screws in the device.

Step 5



- Remove the 3.15 mm screw on the left side of the camera.

Step 6



- Remove the left side casing.

Step 7




- Remove the two 3.15 mm screws on the right side of the camera.

Step 8



- Remove the bottom right panel.

Step 9

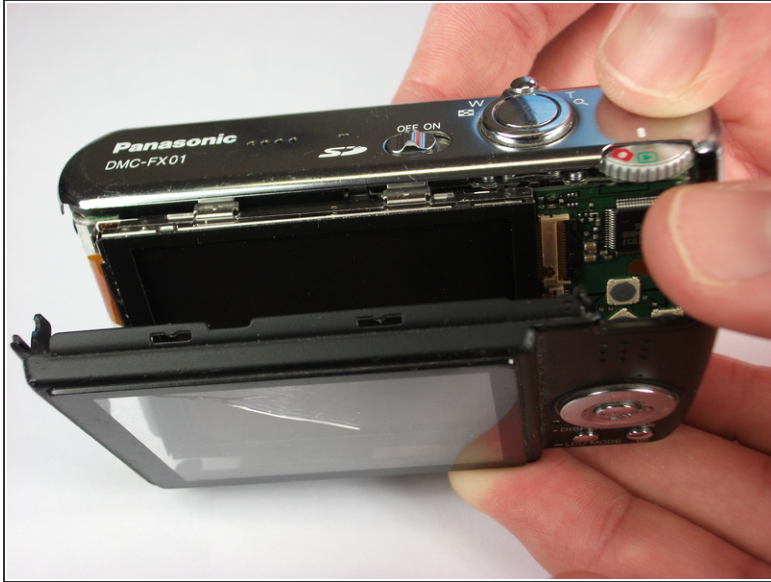

- Gently remove the back casing.

⚠ Start at the bottom and carefully pry towards the top to get this piece free.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 02:05:17 PM.